

**EN**

## Product Overview

Read this manual carefully before use, and retain it for future reference.

Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

**EN**

## Installation

- Drill holes**  
Place the base in the position the ceiling light will be installed, and mark the positions of the mounting holes, then remove the base. Use a  $\phi 6$  mm drill to drill holes with a depth of at least 40 mm, then insert the included four wall plugs into the holes.
- Fix the base**  
Lead the stripped wires through the wiring hole in the base, and then align the mounting holes with the wall plugs. Screw the included four self-tapping screws into the wall plugs to fix the base onto the ceiling. Make sure the base is securely installed.
- Connect the stripped wires**  
The terminal block connector is suitable for wires with a cross-sectional area of 0.75–1.5 mm<sup>2</sup>. Strip about 6–8 mm of the wires, then connect the neutral, ground, and live wires according to the marks (N, GND L) to the terminal block connector on the ceiling light. Use a screwdriver to clamp down each line by tightening the screws. Gently pull each wire to ensure it has been firmly connected.  
Note: The wires should run closely along the base in order to avoid shadows on the lampshade. If the wires are too long, please cut off the excess part.
- Install the lampshade**  
Hold both sides of the lampshade and align it with the base, then gently place it onto the base. Rotate the lampshade clockwise and lock it into the place until the internal metal part makes a clicking sound.  
Note: Try to wiggle the lampshade around to make sure it is properly and firmly installed. Otherwise, it may fall down.

**EN**

## Apple HomeKit Smart Control

- Open the Home app on your iPhone or iPad.
- Tap "Add Accessories" and follow the instructions to scan the QR code either on the back cover of the user manual or on the junction box, or enter the 8-digit setup code above the QR code to grant the Apple Home app access.

\* The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.  
Note: The version of the app might have been updated, please follow the instructions based on the current app version.

**EN**

## Connect with Mi Home/Xiaomi Home App

This product works with Mi Home/Xiaomi Home app \*. Control your device, and interact it and other smart home devices with Mi Home/Xiaomi Home app.

\* Make sure a Wi-Fi network with Internet access is available (this product does not support 5 GHz networks).  
Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mi Home/Xiaomi Home" in the app store to download and install it.  
Open Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow prompts to add your device.

**EN**

## Restoring Factory Settings

Use the wall switch to turn on and off the ceiling light within 5 seconds, you can change the color temperature from warm yellow light, white light to night light by default. You can set the favorite light via the app.  
Note: Cycling the three light modes twice and pressing the wall switch again will restore the factory settings of the ceiling light.

**EN**

## Replacing the Light Source

- Remove the light source**  
The ceiling light contains three light boards and three protective covers. Each light board is fixed to the base with two rivets and each protective cover is fixed to the light board and base with three rivets.  
When removing the light source, first uninstall the three rivets from the protective

**EN**

cover of the light board, then remove the protective cover of the light board and unplug the wiring connected to the light board. Finally, uninstall the two rivets from the light board, and then remove the light board.

**2. Install the light source**  
Place the light board on the base, and use two new rivets to fix the light board onto the base. Connect the wiring, then install the protective cover on the light board with three new rivets to fix the cover onto the base.  
Warning: Before replacing the LED light board, cut off the electricity to prevent an electric shock. This replacement should only be carried out by a qualified electrician.

Press down the plastic tip of the rivet cap about 3 mm, then remove the rivet bracket to completely remove the rivet.

**EN**

## Specifications

Model: MJXDD01SYL  
Power Factor: >0.9  
Operating Temperature: -10°C to 40°C  
Operating Humidity: 0–85% RH  
Color Temperature: 2700–6000 K  
Rated Input: 100–240V ~ 50/60Hz Max. 0.5A  
Rated Power: 45 W (81 x 1 W/LED module)  
Compatible with: Android 4.4 & iOS 9.0 or above  
Wireless Connectivity: Wi-Fi IEEE 802.11 b/g/n 2.4 GHz, Bluetooth 4.2 BLE  
Operating Frequency: 2412–2472 MHz (Wi-Fi) 2402–2480 MHz (BT)  
Maximum Output Power: 18.95 dBm (Wi-Fi) 4.81 dBm (BT)

**EN**

## Product Features

- Adjustable Color Temperature
- Adjustable Brightness
- CRI
- Smart Scene
- App Remote Control
- Voice Control
- Smart Connection
- Firmware Update

**EN**

## Precautions

- Make sure the voltage is consistent with the ceiling light's operating voltage before use. Using the mismatched voltage may damage the ceiling light and cause safety hazards.
- Do not replace the light source of the ceiling light by yourself. The light source should only be replaced by the manufacturer, after-sales service, or a qualified electrician.
- The ceiling light generates heat during working. Please keep it well ventilated for heat dissipation.
- This ceiling light can be controlled by an app or remote control (not included, sold separately). Turning off the ceiling light by remote control or app does not cut it off from the electricity, hence, do not touch, replace, or disassemble this ceiling light. Otherwise, it may cause an electric shock, injury, or even death.
- The light installation requires a qualified electrician, and the wiring must comply with IEEE electrical standards or national standards.
- The ceiling light should be installed in a stable location to prevent it from dropping down or falling off.
- Under normal use of condition, this equipment should be kept a separation distance of at least 20cm between the antenna and the body of the user.
- For indoor use only.

**EN**

## CE EU Declaration of Conformity

Hereby, Qingdao Yealink Information Technology Co., Ltd. declares that the radio equipment type MJXDD01SYL is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.mi.com/en/service/support/declaration.html>.

**EN**

## WEEE Disposal and Recycling

All products bearing this symbol are waste electrical and electronic equipment (WEEE) as in directive 2012/19/EU which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.